IMP0RTANT FEATURES

ADVANCED MESSAGE MANAGEMENT

Allows you to manage your messages more effectively and efficiently. Digital technology provides you with the following user conveniences:

Selective Save & Erase: Save and erase specific messages at the machine for added convenience and flexibility.

Skip & Repeat: During playback of messages at the machine or remotely, skip and repeat messages for greater playback control.

Instant Access™ to Messages: All messages are recorded digitally and therefore can be accessed instantly for more efficient playback than tape based units.

All Digital Recording: Greetings and incoming messages are recorded on a digital chip, eliminating mechanical components and increasing reliability. The TA-119 allows 20 minutes of combined recording time for the greeting, incoming messages, recorded memos and conversations, and Message File messages.

Your digital answering machine provides you with the following advantages:

1. **Reliability**. There are no moving parts to break. The use of electronic components effectively increases the life of your machine.
2. **Operational Ease**. There is no tape to rewind or entangle. You no longer have to worry about replacing worn or damaged parts.

NOTE:

■ The audio quality of the digitally recorded greeting and incoming messages may be subtly different than those recorded on microcassette.

VOICE TIME/DAY STAMP

No more guess-work to determine the time and day that your messages were recorded. Your TA-119 will digitally stamp each message with this information.

VOICE ASSISTED OPERATION

A synthesized voice confirms machine functions and commands when operating and programming the TA-119 at the machine or via remote access.

CONFIRMATION VOICE PROMPT

A synthesized voice will reconfirm the selective erasing of messages. After completion of message playback, you will hear " Two messages erased."

AUTO EXTENSION DISCONNECT

You can answer a call from any extension phone connected to the same line as the TA-119. Pick up any extension phone after the TA-119 has answered the call. The unit will automatically stop playing your greeting or recording an incoming message. If it does not stop, hang up the phone and then answer the call again after two seconds to allow the answering system to detect the extension phone.

SHORT BURST/CELLULAR COMPATIBLE

The TA-119 is accessible from most telephones, pay phones and cellular phones for remote operation.

INITIAL SETUP

RING SELECT SWITCH

The RING SELECT SWITCH is located on the back of the unit. The answering machine is shipped with the RING SELECT SWITCH set to 4 rings.

Set the ***RING SELECT SWITCH*** to TS (Tollsaver), 2 or 4 to choose the number of rings before the TA-119 answers an incoming call.

TS = When calling from a remote location, Tollsaver will help eliminate toll charges by letting you know if there are any new messages before the TA-119 answers.
When set to **TS**, it answers calls after the:

INITIAL SET

RECORD GREETING

Record a personalized greeting, of unlimited length, to answer your calls.

1 Be sure the LEDs are lit or flashing. Set th ***VOLUME CONTROL*** (located on the right side) at the midpoint.

NOTE:

■ The sound level is automatically adjusted when yo greeting is played over the phone line.

2 Press ***GREETING RECORD*** (under th lid). "**rc**" will appear in the display and you will hear:

Please reco new greetin

NOTE:

■ Your current greeting will be erased unless you fi transfer it to Greeting File.

3 Begin speaking 6-8" from the microphone

4 After you finish speaking, press ***GREETING RECORD*** again.

5 The TA-119 will play your new greeting.

Hi, this is...

GREE

Up to ten different greetings can be saved in th these greetings the caller will hear.

STORING A GREETI

1 Record a message using the method des

2 Press ***GREETING FILE*** while the greet after recording has ended) to store your *"Greeting File Transferred"* and "**Fi**" will a

OR

2 Press ***GREETING CHECK*** (under the ***GREETING FILE*** while the greeting is You will hear *"Greeting File Transferred"*

INITIAL SETUP - GREETING

CORD GREETING

onalized greeting, of unlimited
ver your calls.

he LEDs are lit or flashing. Set the
IE CONTROL (located on the
e) at the midpoint.

vel is automatically adjusted when your
ayed over the phone line.

REETING RECORD (under the
will appear in the display and you

ECORD CHECK
GREETING

Please record new greeting.

rc

greeting will be erased unless you first
Greeting File.

eaking 6-8" from the microphone.

finish speaking, press
ING RECORD again.

19 will play
greeting.

Hi, this is...

PRE-RECORDED GREETING

If you do not record a greeting or a power failure depletes the 9 volt battery, the TA-119 will answer calls with the following pre-recorded message, "*Please record message.*"

ANNOUNCE ONLY

Set the TA-119 to only play greetings and not record incoming messages.

1 Press and hold ***ANNOUNCE ONLY*** for 2 seconds. "**AO**" will appear in the LCD to indicate the ANNOUNCE ONLY mode is activated.

AO

ANNOUNCE ONLY

2 To turn off Announce Only Mode, press ***ANNOUNCE ONLY*** briefly. The display will show message count and will no longer read "**AO**".

CHECK THE GREETING

You can listen to your greeting anytime.

1 Press ***GREETING CHECK*** (under the lid). The TA-119 will play your greeting. If a greeting was not recorded, the pre-recorded greeting will play.

RECORD CHECK
GREETING

GREETING FILE

rent greetings can be saved in the Greeting File. At any time you can select which of
s the caller will hear.

TORING A GREETING IN THE GREETING FILE

message using the method described under "RECORD GREETING".

REETING FILE while the greeting is being replayed (greeting is replayed automatically
ording has ended) to store your new greeting in the Greeting File. You will hear
g File Transferred" and "**Fi**" will appear in the display.

GREETING FILE

Fi

REETING CHECK (under the lid) to play your current greeting. Then press
ING FILE while the greeting is playing to store your greeting in the Greeting File.
hear *"Greeting File Transferred"* and "**Fi**" will appear in the display.

D CHECK

GREETING FILE

Fi

BASIC OPERAT

ON/OFF

When set to the Off Mode, the TA-119 will not record messages. The ringer can be set to operate with the unit on or off. See "RINGER ON/OFF" to set the ringer. On/Off feature can also be used to exit Message Playback, Message Pause or Time Set Mode. Doing so will return the unit to Standby Mode. All messages will be saved.

1 Press ***ON/OFF*** (under the lid) to turn the answering machine on and off.

ON/OFF

TA

The TA-119 al
synthesized vo

NOTE:
■ The time and

1 Press ***TI***
feature.

TIME

PLAYING MESSA

CALL SCREENING

Call Screening allows you to hear who is calling before you answer th
the call and play your greeting through the speaker. You will then hea

If you want to speak to your caller, press ***SPEAKERPHONE*** or pic
connected to the same line as your TA-119. The TA-119 will automati
EXTENSION DISCONNECT.")

MESSAGES/ON-OFF INDI

The MESSAGES/ON-OFF INDICATOR has four settings:

1. **OFF** = The TA-119 is off.
2. **ON** (light is solid) = The machine is on and no messages have bee
3. Light flashes **slowly** = Messages have been played and saved.
4. Light flashes **quickly** = New messages have been received and no

PLAY NEW MESSAG

The MESSAGES/ON-OFF INDICATOR will flash quickly when new mes
shows the total number of new and saved messages (not including n
The TA-119 has a recording capacity of 20 minutes. Messages can b
length.

1 Press ***NEW PLAY/PAUSE***. The new message count will be announced. You will hear:

5

Three new messages.

ALL NEW

PLAY/PAUSE

2 New mes
received.
and day v
message

NOTE:
■ If the time an
not been set,
will be stamp
"Sunday 12:0

3 After the
message

SIC OPERATION

9 will not
set to
RINGER ON/
can also be
sage Pause
rn the unit
be saved.

to turn
off.

TALKING CLOCK

The TA-119 also functions as a clock. A synthesized voice will announce the time and day.

NOTE:
■ The time and date must be set.

1 Press ***TIME*** to use the Talking Clock feature.

YING MESSAGES

CALL SCREENING

o is calling before you answer the phone. The TA-119 will answer
gh the speaker. You will then hear the caller through the speaker.

ress ***SPEAKERPHONE*** or pick up any extension phone
A-119. The TA-119 will automatically stop recording. (See "AUTO

AGES/ON-OFF INDICATOR

has four settings:

is on and no messages have been received.
have been played and saved.
ages have been received and not yet played.

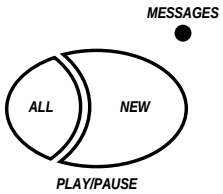

LAY NEW MESSAGES

will flash quickly when new messages are received. The display
saved messages (not including messages stored in Message File.)
of 20 minutes. Messages can be recorded up to five minutes in

he new
ed. You will

ree new
essages.

2 New messages are played in the order received. The message number and time and day will be announced before each message.

NOTE:
■ If the time and day have not been set, all messages will be stamped with *"Sunday 12:00 a.m."*

*Message two.
Tuesday, 3:45 p.m.
Hi, this is Sue.
I was calling...*

3 After the end of the last message you will hear:

End of messages.

PL

PAUSE MESSAGE PLAYBACK

You can temporarily pause message playback up to five minutes. During Pause Mode, the M
ON-OFF and MESSAGE FILE INDICATOR will flash. The TA-119 will not answer calls in the

1 Press ***ALL*** or ***NEW PLAY/PAUSE*** during message playback. The MESSAGES/ON-OFF INDICATOR will flash slowly.

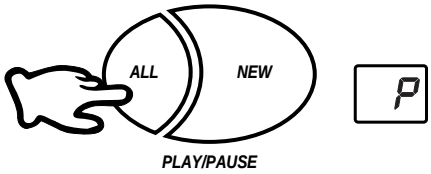

You have three options during Pause Mode:

2 Press ***ALL*** or ***NEW PLAY/PAUSE*** again to resume listening to messages.

OR

2 Leave the TA-119 in Pause Mo
automatically reset to answer c
five minutes. All messages will

OR

2 Press ***ON/OFF*** twice to end p
return to Standby Mode. Any r
erased prior to Pause Mode, w
saved.

SAVE & ERASE MESSAGES

AUTOMATIC SAVE

1 If you **do not** press ERASE while listening to messages or after playing them, the TA
automatically save all messages.

SELECTIVE SAVE & ERASE

The TA-119 allows you to selectively save or erase individual messages or all messages.

INDIVIDUALLY SAVE OR ERASE MESSAGES:

1 Press ***SAVE*** or ***ERASE*** as the message you want saved or erased is played back. A beep will be heard.

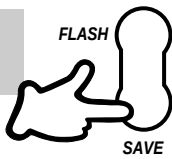

ERASE OR SAVE ALL MESSAGES:

1 After playback of messages, you will hear, *"End of messages."* Press ***SAVE*** or ***ERASE***. The TA-119 allows up to seven seconds in which the user can save or erase all messages. During the seven second time period, the MESSAGES/ON-OFF INDICATOR will flash.

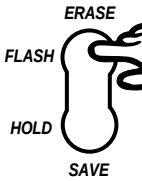

SAVE/ERASE SAFEGUARD

The TA-119 is designed to allow the user up to seven seconds to change their mind after er
saving messages. During this time, press ***SAVE*** or ***ERASE***, this will override your previou
and erase or save all messages.

PLAYBACK OPTIONS

PLAYBACK

nutes. During Pause Mode, the MESSAGES/
119 will not answer calls in the Pause Mode.

Leave the TA-119 in Pause Mode. It will automatically reset to answer calls after five minutes. All messages will be saved.

Press ***ON/OFF*** twice to end pause and return to Standby Mode. Any messages erased prior to Pause Mode, will now be saved.

ANSWER A CALL DURING PLAYBACK

If you receive an incoming call during message playback:

1 Press ***SPEAKERPHONE*** or pick up the telephone connected to the answering machine or an extension phone and speak with the caller. All messages will be saved.

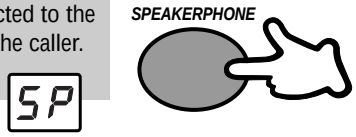

MEMO/CONVERSATION RECORD

RECORD A MEMO

You can record a memo for another household member or a reminder for yourself. A memo can be recorded up to five minutes in length and played at the machine or in remote operation. The memo will be stamped with the time and day it was recorded. Recorded memos are played along with the incoming messages in the order in which they were recorded.

1 Press ***MEMO RECORD***.



2 "**rc**" will appear in the display and you will hear:

Please record a message.

3 Press ***MEMO RECORD*** at the end of the recording.

RECORD A CONVERSATION

The TA-119 allows you to record important telephone conversations while using the speakerphone. The conversation will be stamped with the time and day it was recorded. If the call is not answered at the speakerphone, see "SWITCH FROM AN EXTENSION PHONE TO SPEAKERPHONE."

1 Using Speakerphone, press ***CONV RECORD*** any time during a conversation. "**rc**" will appear in the display.

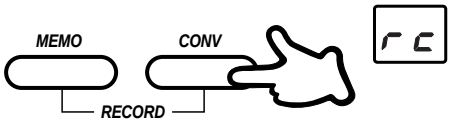

2 Press ***CONV RECORD*** again or ***SPEAKERPHONE*** to end the recording.

NOTE: In certain states, it is unlawful and may lead to criminal penalties to record any telephone conversation without prior consent of all parties.

MESSAGES

SAVE

ges or after playing them, the TA-119 will

& ERASE

ual messages or all messages.

ved or erased

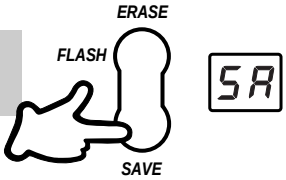

essages." Press
conds in which
seven second
flash.

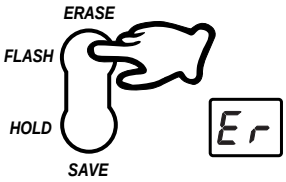

nds to change their mind after erasing or
E, this will override your previous command

SPEAKERPHONE

MAXIMIZING THE BENEFITS OF THE SPEAKERPHONE

- One person at a time should speak while using the speakerphone.
- Red. ce or eliminate backgro. nd noise s. ch as radio or television

RING SELECT SWITCH

The RING SELECT SWITCH is located on the back of the unit. The answering machine is shipped with the RING SELECT SWITCH set to 4 rings.

Set the ***RING SELECT SWITCH*** to TS (Tollsaver), 2 or 4 to choose the number of rings before the TA-119 answers an incoming call.

TS = When calling from a remote location, Tollsaver will help eliminate toll charges by letting you know if there are any new messages before the TA-119 answers.
When set to **TS**, it answers calls after the:
Second ring when there are **NEW** messages
Fourth ring when there are **NO** new messages
Hang up after the third ring to avoid toll charges.

2 = Answers all calls on the **second** ring.

4 = Answers all calls on the **fourth** ring.

NOTE:

- After you have retrieved messages, either from a remote location or at the machine, Tollsaver will reset to answer on the fourth ring until a new incoming message is recorded.

RINGER ON/OFF

You can set the TA-119 to ring like a telephone when a call comes in. You may answer the call using the speakerphone or an extension phone. To program the Ringer On/Off feature, the unit must be on and the MESSAGES/ON-OFF INDICATOR should be lit. The answering machine is shipped with the ringer off.

1 Set the ***VOLUME CONTROL*** at the midpoint (located on the right side).

Ringer **ON** = You will hear a **ringing** sound to confirm the ringer was turned on.

Ringer **OFF** = You will hear a **beep** to confirm the ringer was turned off.

2 Press and hold ***ERASE*** for five seconds. A ring indicates the ringer is on.

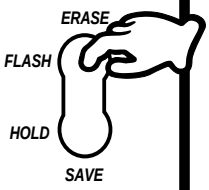

SET THE TIME/DAY STAMP

During message playback, a synthesized voice will announce the time and day of the week that each message was received. To set the time and day of the week:

1 Press ***TIME SET*** (under the lid). You will hear:

Sunday

2 Press ***SKIP*** or ***REPEAT*** until the correct day is announced.

Saturday

3 Press ***TIME SET*** to set the hour.

Enter hour 12 a.m.

4 Press ***SKIP*** to advance or ***REPEAT*** to reverse the hour shown in the display.

12

5 Press ***TIME SET*** to set the minutes.

Enter minute.

6 Press ***SKIP*** to advance or ***REPEAT*** to reverse the minutes shown in the display.

00

7 Press ***TIME SET*** again to end. The day and time will be announced and time set is complete.

Saturday, 2:32 a.m.

NOTE:

- If the time and day have not been set or a power failure depletes the 9 volt battery, all messages will be stamped with *"Sunday 12:00 a.m."*

after recording has ended) to store your
"Greeting File Transferred" and "**Fi**" will a

OR

2 Press ***GREETING CHECK*** (under the
GREETING FILE while the greeting is
You will hear *"Greeting File Transferred"*

3 At any time you can repeat this process t

NOTE:

- Each time a new greeting is recorded using the G
become the **current outgoing message**. The prev
not stored in the Greeting File. Make sure that yo
you may wish to use it again later. If the previous
File, pressing ***GREETING RECORD*** will send that
saved in the Greeting File, it will not be deleted un

CHOOSING A GREETIN

To select which stored greeting will be used as

1 Press ***GREETING FILE***. You will hear
"Greeting One" followed by your first
stored greeting.

2 Press ***SKIP*** or ***REPEAT*** as described under "MESSAGE PLAYBACK" to advance to desired greeting.

NOTES::

- To select a greeting from the Greeting File as the
greeting is playing.
- The previous greeting used as the outgoing mess
had already stored in the Greeting File. The previo
your current outgoing message has not been save
transfer it **into** Greeting File **before** you transfer a

SAVING/ERASING GREE

Greetings in the Greeting File will remain saved
from the Greeting File:

1 Press ***GREETING FILE*** and use ***SKIP***
and ***REPEAT*** to hear the contents of the
Greeting File.

NOTE:

- If you change your mind, and wish to save a gree
playback of the greeting **OR** within 7 seconds afte

rding has ended) to store your new greeting in the Greeting File. You will hear
g File Transferred" and "**Fi**" will appear in the display.

REETING CHECK (under the lid) to play your current greeting. Then press
NG FILE while the greeting is playing to store your greeting in the Greeting File.
hear *"Greeting File Transferred"* and "**Fi**" will appear in the display.

me you can repeat this process to add additional greetings into the Greeting File.

ew greeting is recorded using the GREETING RECORD button, that new greeting will automatically
urrent outgoing message. The previous greeting used as the outgoing message **will be lost** if it was
the Greeting File. Make sure that you have saved the current outgoing message in the Greeting file if
to use it again later. If the previous greeting was one which you had already stored in the Greeting
GREETING RECORD will send that message back to the Greeting File. Once a greeting has been
Greeting File, it will not be deleted until you choose to erase it from the Greeting File.

OSING A GREETING FROM THE GREETING FILE

h stored greeting will be used as the current Outgoing Message:

REETING FILE. You will hear
g One" followed by your first
eeting.

KIP or ***REPEAT***
bed under
GE PLAYBACK" to
to desired greeting.

3 While hearing desired greeting, press ***RECORD GREETING*** to select greeting as the new outgoing message.

4 You will hear *"Greeting File Transferred"* and "**Fi**" will appear in the display.

eeting from the Greeting File as the outgoing message, you must press ***RECORD GREETING*** **while** the
aying.
greeting used as the outgoing message will be sent back to the Greeting File **IF** it was one which you
tored in the Greeting File. The previous greeting **will be lost** if it was not a Greeting File greeting. If
outgoing message has not been saved in Greeting File, and you wish to use it again later, you should
o Greeting File **before** you transfer a different message **out of** Greeting File.

NG/ERASING GREETINGS IN THE GREETING FILE

e Greeting File will remain saved until you choose to erase them. To erase a greeting
ing File:

REETING FILE and use ***SKIP***
PEAT to hear the contents of the
File.

2 Press ***ERASE*** while the greeting you wish to erase is playing. You will hear a beep and "**Er**" will appear in the display.

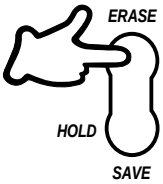

your mind, and wish to save a greeting after you have pressed ***ERASE***, press ***SAVE*** during the
e greeting **OR** within 7 seconds after all the greetings have played.

hear:

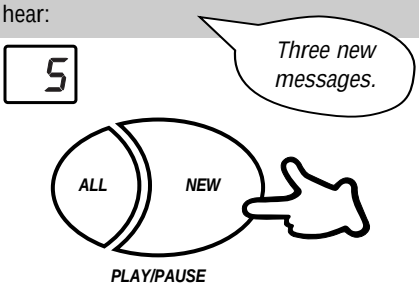

and day v
message

NOTE:
- If the time an
not been set,
will be stamp
"Sunday 12:0

3 After the
message

PLAY ALL MESSAGE

The MESSAGES/ON-OFF INDICATOR flashes quickly when new mess
flashes slowly to indicate messages have been played and saved. Th
of new and saved messages (not including messages stored in Mess

1 Press ***ALL PLAY/PAUSE***.
You will hear:

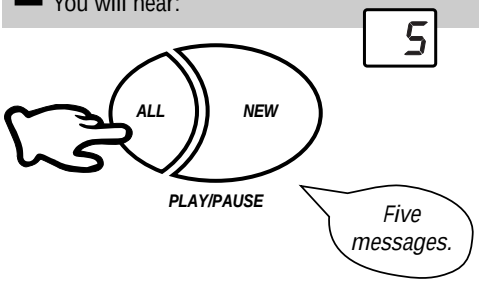

2 All messa
received.
and day v
message.

NOTE:
- If the time an
not been set,
will be stamp
"Sunday 12:0

3 After the
message

MESSAGE PLAYE

REPEAT

You can repeat the current message.

1 Press ***REPEAT.*** The message number will be announced and the current message will replay.

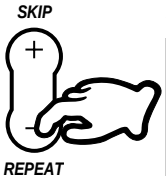

SK

Skip backwar
message num
announced.

1 Press ***RE***
a previou
Press ***RE***
backwar

SKIP FORWARD

You can skip forward through messages. The message number will be announced.

1 Press ***SKIP*** once to skip forward to the next message.

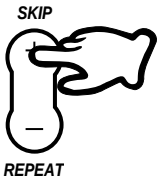

REPLA

1 Press ***AL***
"*End of m*

and day will be announced before each message.

ree new essages.

NOTE:
- If the time and day have not been set, all messages will be stamped with *"Sunday 12:00 a.m."*

Message two. Tuesday, 3:45 p.m. Hi, this is Sue. I was calling...

3 After the end of the last message you will hear:

End of messages.

LAY ALL MESSAGES

flashes quickly when new messages have been received and have been played and saved. The display shows the total number luding messages stored in Message File.)

5

2 All messages are played in the order received. The message number and time and day will be announced before each message.

NOTE:
- If the time and day have not been set, all messages will be stamped with *"Sunday 12:00 am."*

Message one. Wednesday, 1:34 p.m. Hi Mike, I'm calling to ...

Five messages.

3 After the end of the last message you will hear:

End of messages.

SAGE PLAYBACK

SKIP BACKWARD

Skip backward message by message. The message number and time/day stamp will be announced.

SKIP

REPEAT

1 Press ***REPEAT*** twice to skip backward to a previous message.
Press ***REPEAT*** each time you want to skip backward through a message.

D

ges. The

SKIP

REPEAT

REPLAY ALL MESSAGES

1 Press ***ALL PLAY/PAUSE*** after hearing, "*End of messages.*"

ALL NEW

PLAY/PAUSE

1 ***SAVE*** or ***ERASE***. The TA-119 allows up to seven seconds in which the user can save or erase all messages. During the seven second time period, the MESSAGES/ON-OFF INDICATOR will flash.

FLASH

HOLD

SAVE

SAVE/ERASE SAFEGUARD

The TA-119 is designed to allow the user up to seven seconds to change their mind after er saving messages. During this time, press ***SAVE*** or ***ERASE***, this will override your previou and erase or save all messages.

MESSAGE FILE

MESSAGE FILE FEATURES

Message File offers a convenient way to store important messages, long messages or to separate messages for business, personal use or for other users.

The MESSAGE FILE INDICATOR has three settings:
Quickly flashing: New messages have been transferred to Message File, but not yet played
Slowly flashing: Messages have already been played and saved in Message File.
On: No message stored in Message File.

FORWARD MESSAGE TO MESSAGE FILE

To store a message into Message File:

1 Press ***ALL*** or ***NEW PLAY/PAUSE*** to playback your messages.

ALL NEW

PLAY/PAUSE

2 Press ***MESSAGE FILE*** durin you wish to transfer. You will h "*Message File transferred.*" Th will be removed from the main location and saved in Message messages in the main location renumbered, and the next mes play.

F1

MESSAG

NOTE:
- If the ERASE key is pressed at the end of message playback, then all messages will be erased in the location, and the messages that were forwarded during playback will be saved in Message File.

PLAY ALL MESSAGES IN MESSAGE FILE

When playing messages in Message File, you can utilize the convenient playback features s Repeat, Pause Message Playback and Selective Save/Erase. See the above sections for mo

1 Press ***MESSAGE FILE***. Messages stored in this location will be played. You will hear:

No messages. **OR** *Mes Four Mes Wednes Hi Mike*

MESSAGE FILE

F1

2 After the end of the last message, you will hear, "*End of messages.*"

conds in which
seven second
flash.

nds to change their mind after erasing or
E, this will override your previous command

FILE

EATURES

essages, long messages
other users.

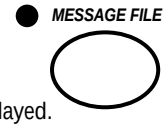

Message File, but not yet played.
saved in Message File.

D MESSAGE FILE

Press ***MESSAGE FILE*** during message you wish to transfer. You will hear "*Message File transferred.*" The message will be removed from the main message location and saved in Message File. The messages in the main location area, will be renumbered, and the next message will play.

n all messages will be erased in the main play
k will be saved in Message File.

N MESSAGE FILE

e convenient playback features such as: Skip/
. See the above sections for more information.

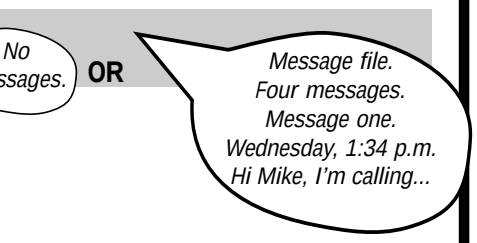

f messages."

SPEAKERPHONE

MAXIMIZING THE BENEFITS OF THE SPEAKERPHONE

- One person at a time should speak while using the speakerphone.
- Reduce or eliminate background noise such as radio or television.
- Do not use an extension phone and speakerphone at the same time.

HOLD

You may place a call on hold while using the speakerphone. Move to another room and pick up an extension phone. The TA-119 will automatically take the call off hold.

1 Press ***SAVE/HOLD***. "**Hd**" will appear in the display.

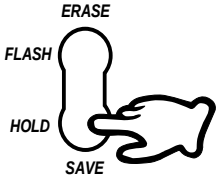

2 Press ***HOLD***, ***SPEAKERPHONE*** or pick up an extension phone to take a call off hold.

NOTE:
- Any call left on hold for five minutes will be automatically disconnected.

SWITCH FROM SPEAKERPHONE TO AN EXTENSION PHONE

1 While a caller is on hold, pick up an extension phone.

2 Begin speaking.

SWITCH FROM AN EXTENSION PHONE TO SPEAKERPHONE

1 While using an extension phone, press ***SPEAKERPHONE***.

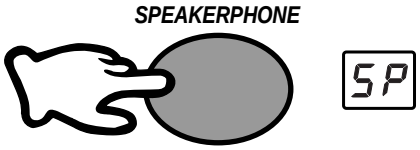

2 Hang up the extension phone and begin speaking.

NOTE:
- If you use the speakerphone and a handset at the same time, you may hear a howling noise. Lower the volume on the TA-119 to eliminate the noise.

FLASH

1 The ERASE button also functions as a flash button. If you subscribe to a call waiting service and you receive another call while using the speakerphone, press ***ERASE/FLASH*** to answer the second call. Press ***ERASE/FLASH*** again to return to the first call. Flash may also be used on a business phone system (CENTREX, PBX) for transferring calls.

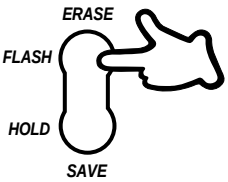

REMOTE OPERATION

You can use Remote Operation from most touchtone or cellular phones to retrieve, replay, erase and save messages. The TA-119's Remote Access Code allows you to access the TA-119 when you are away from your home or office.

SET REMOTE ACCESS CODE

The TA-119 is shipped with the remote access code set as "1 2 3". To change the remote access code:

1 Press ***REMOTE CODE*** (under the lid). You will hear the current remote access code.

2 Press ***REMOTE CODE*** again. You will hear *"Enter remote code one"* and the current first digit of the remote code will appear in the display.

3 Press ***SKIP*** to advance and ***REPEAT*** to reverse the number shown in the display.

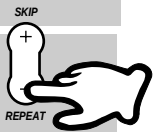

4 Press ***REMOTE CODE*** again to set the second digit and once more to set the third digit.

5 Press ***REMOTE CODE*** again to hear your new Remote Access Code.

REMOTE MESSAGE RETRIEVAL

To use Remote Operation, slowly enter each digit of your Remote Access Code after the greeting plays. If you call from a rotary or pulse telephone, use Casio PhoneMate's Touchtone Dialer. Use the accessory order form to place an order.

1 Call the answering machine from a cellular, pay or touchtone telephone.

2 After the greeting has played, enter your ***3-DIGIT ACCESS CODE***. New messages will play. After hearing *"End of messages"* the remote menu will play. Select another option or hang up.

NOTE:
- If the TA-119 does not respond when you enter your code, try again after the beep.

REMOTE VOICE MENU

After new message playback, the TA-119 lists the remote menu options. You can select a remote option or hang up to save messages.

Voice Menu	Additional Options
*Enter **1** to Replay.*	*Enter ✱ to Repeat.*
*Enter **2** to Save.*	*Enter # to Skip.*
*Enter **3** to Erase.*	*Enter **0** to hear Voice Menu.*
*Enter **4** to Record Message.*	
*Enter **5** to Record Greeting.*	
*Enter **6** to Play Message File.*	

REPLAY MESSAGES

Replay all new and saved messages from a remote location.

1 Press ***1*** on a touchtone keypad. You will hear:

Four messages. Message one. Thursday, 10:15 a.m.

2 You may select another option or hang up and the TA-119 will automatically save messages.

SAVE MESSAGES

Messages can individually be saved during remote playback or automatically saved by hanging up.

To save messages individually:

1 Press ***2*** during the message you wish to save.

To save all messages:

1 Press ***2*** during the voice menu.

OR

2 Hang up.

ERASE MESSAGES

To selectively erase a message:

1 Press ***3*** as the message you wish to erase is played back.

To erase all messages:

1 Press ***3*** during the voice menu.

NOTE:
- If the erase option was chosen, once you disconne from the line, messages are permanently deleted. Prior to hanging up, you may change your mind ar save messages by pressing ***2*** on the touchtone keypad within 10 seconds of your last remote command.

RECORD A MESSAGE

Record a message for yourself or a household member from a remote location.

1 Enter ***4*** on the touchtone keypad to recor a new message. You will hear:

Please record a message. Press fo when finished.

2 After the tone, begin speaking. Press ***4*** when you finish speaking.

RECORD A NEW GREETING

Change your greeting from a remote location.

1 Enter ***5*** on the touchtone keypad to record your new greeting. You will hear:

Record ne greeting. Pr five when fini

2 After the tone, begin speaking. Press ***5*** when you finish speaking.

3 The new greeting will play. You will hear the remote menu again. Select another option or hang up.

PLAY MESSAGE FILE

You can play messages in Message File from a remote location.

1 Enter ***6*** on the touchtone keypad.

Enter six to play message file.

FCC REQUIREMENTS
USER INSTRUCTIONS

IMP
SAFETY I

ON

essages:

uring the voice menu.

tion was chosen, once you disconnect
messages are permanently deleted.
ng up, you may change your mind and
s by pressing ***2*** on the touchtone
10 seconds of your last remote

ORD A MESSAGE

age for yourself or a household
remote location.

n the touchtone keypad to record
ssage.
ear:

Please record a message. Press four when finished.

one, begin speaking. Press ***4***
finish speaking.

D A NEW GREETING

eeting from a remote location.

n the touchtone keypad
your new
You will hear:

Record new greeting. Press five when finished.

one, begin speaking.
hen you finish speaking.

reeting will play. You will hear
e menu again. Select another
hang up.

Y MESSAGE FILE

essages in Message File from a
.

n the
keypad.

Enter six to play message file.

2 Filed messages will be played. You will hear the remote menu again. Select another option or hang up.

REPEAT MESSAGES

1 Press ✱ once to repeat the current message.

SKIP BACKWARD

1 Press ✱ twice to skip backward to previous messages.

SKIP FORWARD

You can skip forward through messages.

1 Press # once to skip forward to the next message.

REMOTE ACTIVATION

If you leave your home or office without turning on your TA-119, you can do so from any telephone.

1 Call and let your phone ring 10 times. The TA-119 will answer and will ask for your remote access code. Enter your ***3-DIGIT REMOTE CODE***.

2 The TA-119 will turn on and will begin the remote access menu.

NOTE:
- If the remote access code is not entered properly, the TA-119 will not turn on.

MESSAGE RETRIEVAL WHEN MEMORY IS FULL

If the TA-119's memory is full, you will hear three short beeps. To retrieve messages remotely when the TA-119's memory is full:

1 Enter your ***3-DIGIT REMOTE ACCESS CODE*** after hearing three beeps. (See "REMOTE MESSAGE RETRIEVAL.")

2 After listening to messages, you may press ***3*** on the keypad to erase messages or, as a specific message plays, press ***3*** to individually erase that message.

ADDITIONAL IN

BATTERY BACKUP

Install one fresh 9 volt (9V) battery to protect your greeting, incoming messages and any programmed information (i.e. time/day stamp) during a power failure. The programmed information is saved during a power failure until the battery is depleted.

PF

INSTALLING A 9V BATTERY

To protect your messages and programmed information during a power failure:

1 Disconnect the AC Adapter from the electrical wall outlet. Turn the TA-119 over and remove the battery cover.

2 Install a 9V alkaline battery. Make sure the battery is connected correctly. Replace the cover. Reconnect the AC Adapter.

TWO-LINE INSTALLATION

Two-line installations may require a two line T-Adapter for your machine to operate correctly. The T-Adapter allows you to connect your machine to Line 1 or Line 2. The TA-119 will only answer one line.

MULTI-LINE INSTALLATION

Installations with more than two lines, such as a business phone system, may require a separate RJ11 jack for answering machines. Please contact your telephone equipment provider for additional information.
You can use the TA-119 as an extension phone on a business phone system, but some systems will require that you install an A+A1 Adapter to light the in-use indicator on the receptionist's console. See the accessory order form to order an A+A1 Adapter.

CLEANING THE TA-119

CAUTION: Disconnect the TA-119 from the power outlet before cleaning.

NOTE:
- Make sure a
  disconnectin
  greeting and
  be recorded

Clean the plas
only. Do not u
of any kind.

BAT

CAUTION:
To reduce the ri
follow these ins
1. Use only a 9
1604A size batt
2. Do not disp
may explode. C
special disposa
3. Do not oper
electrolyte is co
eyes or skin. It
4. Exercise ca
short the batter
rings, bracelets
may overheat a
5. Do not atter
provided with o
The batteries m
6. Do not atter
provided with o
heating them. S
may occur caus
7. When replac
replaced at the
discharged batt
pressure and ru
(Applies to prod
separately repla
8. When insert
proper polarity
insertion of bat
result in leakag
employing mor
primary battery
9. Remove the
product will not
(several months
battery could le
10. Discard "de
"dead" batteries
11. Do not store
with or identifie
temperature are
or refrigerator f
should be prote
and defrosting.
temperature pri

IMPORTANT SAFETY INSTRUCTIONS

REFERENCIA RÀ

INSTALACIÓN

2 Comien

DITIONAL INFO

KUP

to protect
and any
day stamp)
nmed
r

PF

9V

grammed

m the
TA-119 over

ake sure the
Replace the
ter.

LATION

two line
ate correctly.
ct your
-119 will

N

es, such as a
e a separate
Please
rovider for

nsion phone
ome systems
Adapter to
eptionist's
orm to order

A-119

rom the

NOTE:

- Make sure a battery is installed before disconnecting the unit from the power outlet or the greeting and programmable information will need to be recorded and entered.

Clean the plastic cabinet with a clean soft cloth only. Do not use excess water or cleaning liquid of any kind.

BATTERY CAUTION

CAUTION:
To reduce the risk of fire or injury to persons, read and follow these instructions:

1. Use only a 9V carbon zinc or alkaline, 1604 or 1604A size battery.
2. Do not dispose of the battery(ies) in a fire. The cell may explode. Check with local codes for possible special disposal instructions.
3. Do not open or mutilate the battery(ies). Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets and keys. The battery or conductor may overheat and cause burns.
5. Do not attempt to recharge the battery(ies) provided with or identified for use with this product. The batteries may leak corrosive electrolyte or explode.
6. Do not attempt to rejuvenate the battery(ies) provided with or identified for use with this product by heating them. Sudden release of the battery electrolyte may occur causing burns or irritation to eyes or skin.
7. When replacing batteries, all batteries should be replaced at the same time. Mixing fresh and discharged batteries could increase internal cell pressure and rupture the discharged battery(ies). (Applies to products employing more than one separately replaceable primary battery).
8. When inserting batteries into this product, the proper polarity or direction must be observed. Reverse insertion of batteries can cause charging, and that may result in leakage or explosion. (Applies to products employing more than one separately replaceable primary battery).
9. Remove the batteries from this product if the product will not be used for a long period of time (several months or more) since during this time the battery could leak in the product.
10. Discard “dead” batteries as soon as possible since “dead” batteries are more likely to leak in a product.
11. Do not store this product, or the batteries provided with or identified for use with this product in high temperature areas. Batteries that are stored in a freezer or refrigerator for the purpose of extending shelf life should be protected from condensation during storage and defrosting. Batteries should be stabilized at room temperature prior to use after cold storage.

TROUBLESHOOTING

Recorded messages are cut off.

The TA-119 is designed to disconnect from the line after a caller stops talking. Calls may be cut off if a five second pause is detected, if the caller does not speak loud enough, or if the message is less than four seconds.

The TA-119 does not respond when you enter your remote access code during the greeting.

Try re-entering the correct code after the beep.

Between messages there is an operator recording or a beep and dial tone.

The caller has hung up without leaving a message. A shorter greeting will reduce the frequency of these recordings.

You have more than one telephone number and are experiencing difficulty.

See "MULTI-LINE INSTALLATION."

There is no sound during playback.

Check and adjust the VOLUME CONTROL.

The unit does not automatically stop playing the greeting or recording a message when you pick up an extension phone.

Hang up the phone and then answer the call again after two seconds to allow the answering system to detect the extension phone.

The TA-119 does not respond w
***ANNOUNCE ONLY* button is pres**

Make sure you are pressing and
the button for at least 2 seconds

After several attempts the TA-1
operate properly.

To reset the TA-119, unplug the
PLUG from the back of the TA-1
seconds and remove the battery
installed). The greeting, incomin
and time/day stamp will be lost.
greeting and set the time and da

If this action does not fix the pro
Casio PhoneMate Helpline. Casio
Helpline staff can often resolve p
recommend repair service when

Unless you live close to a Casio
Service Center, you may be requ
product to Casio PhoneMate for
the product to the service center

1. Package the unit in its origina
   comparable package.
2. Include a clear and specific ex
   the problem.
3. Include your name, address, a
   number.
4. Provide a legible photocopy o
   store receipt for warranty pur

FACTORY SERVICE CENTERS

CASIO PHONEMATE, INC.
Attn: Customer Service
20665 Manhattan Place
Torrance, CA 90501
(310) 328-6453

CASIO PHONEMATE, IN
Attn: Customer Servic
8805 Kelso Drive
Baltimore, MD 21221
(410) 391-0974

Should you have additional questions, please call Casio PhoneMate’s Helpline at (310) 320
assistance.

Design and specifications are subject to change without notice.

CASIO PHONEMATE, INC.
20665 Manhattan Place, Torrance, CA 90501
Internet Web Site: http://www.casiophonemate.com

MISI 1/99
Printed in Malaysia
U.S. Patents: 5,289,529; 5,400,393; 5,588,046; 5,606,598; 5,680,075; 5,692,0

ERENCIA RÀPIDA

2 Comience a hablar a una distancia de

WARRANTY

IMPORTANT! SALES SLIP OR EVIDENCE OF PURCHASE DATE REQUIRE

OOTING

The TA-119 does not respond when *ANNOUNCE ONLY* button is pressed.

Make sure you are pressing and holding the button for at least 2 seconds.

After several attempts the TA-119 will not operate properly.

To reset the TA-119, unplug the AC ADAPTER PLUG from the back of the TA-119 for 10 seconds and remove the battery (if one is installed). The greeting, incoming messages and time/day stamp will be lost. Re-record the greeting and set the time and day.

If this action does not fix the problem, call the Casio PhoneMate Helpline. Casio PhoneMate's Helpline staff can often resolve problems or recommend repair service when needed.

Unless you live close to a Casio PhoneMate Service Center, you may be required to mail a product to Casio PhoneMate for repair. To mail the product to the service center you should:

1. Package the unit in its original box or a comparable package.
2. Include a clear and specific explanation of the problem.
3. Include your name, address, and phone number.
4. Provide a legible photocopy of the dated store receipt for warranty purposes.

E CENTERS

CASIO PHONEMATE, INC.
Attn: Customer Service
8805 Kelso Drive
Baltimore, MD 21221
(410) 391-0974

honeMate's Helpline at (310) 320-9810 for

to change without notice.
E, INC.
rance, CA 90501
asiophonemate.com

ysia
; 5,606,598; 5,680,075; 5,692,042.

CASIO
PHONEMATE®

EASY TO USE OWNER'S GUIDE

TA-119 Digital Answering Machine with Speakerphone

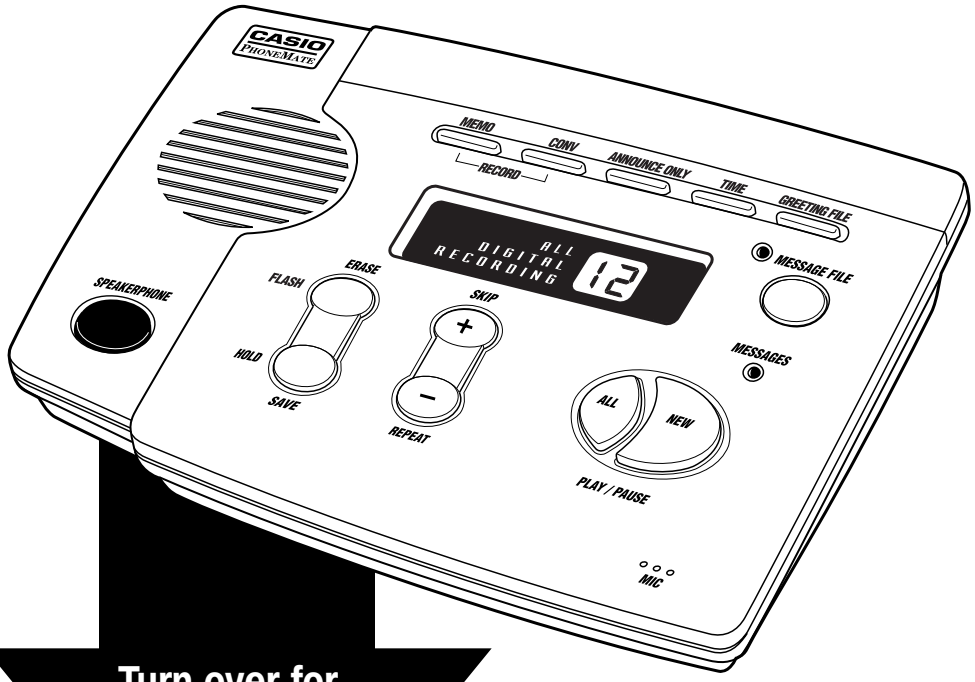

Turn over for installation instructions

NTY

F PURCHASE DATE REQUIRED

INSTALLATION

Select another option or hang up.

NOTE:
- If the TA-119 does not respond when you enter your code, try again after the beep.

1 Press ***3*** as the message you wish to erase is played back.

1 Enter ***6*** on the touchtone keypad.

Enter six to play message file.

FCC REQUIREMENTS USER INSTRUCTIONS

1. This equipment complies with Part 68 of the FCC rules. On the bottom of this equipment is a label that contains, among other information, the FCC registration number and Ringer Equivalence Number (REN) for this equipment. If requested, provide this information to your telephone company.
2. The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your number is called. In most, but not all areas, the sum of the RENs of all devices should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should call your local telephone company to determine the maximum REN for your calling area.
3. If your answering machine causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice is not practical, you will be notified as soon as possible. You will be advised of your right to file a complaint with the FCC.
4. Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper operation of your equipment. If they do, you will be given advance notice so as to give you an opportunity to maintain uninterrupted service.
5. If there is a problem with this unit, the telephone company may ask you to disconnect this equipment from the network until the problem has been corrected or you are sure that the equipment is not malfunctioning.
6. Repairs can only be made by the manufacturer or an authorized service agency. Unauthorized repairs void registration and warranty. Contact seller or manufacturer for details of permissible user-performed routine repairs, and where and how to have other than routine repairs made.
7. This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs. (Contact your state public utility commission or corporation commission for information.)

Jack: RJ11 Ringer Equivalence: See bottom/underside of the TA-119 base unit.
CASIO PHONEMATE, Inc. 20665 Manhattan Place, Torrance, CA 90501

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes made by the user not approved by CASIO PHONEMATE can void the user's authority to operate the equipment.

IMP
SAFETY IN

INSTALLATION INSTRUCTION

1. Never install telephone wiring during a lightnin
2. Never install telephone jacks in wet locations u
3. Never touch uninsulated telephone wires or ter network interface.
4. Use caution when installing or modifying telep

SAFETY PRECAUTIONS

When using your telephone equipment, basic safe fire, electric shock and injury to persons, includin

1. Read and understand all instructions.
2. Follow all warnings and instructions marked o
3. Unplug this product from the wall outlet before damp cloth for cleaning.
4. Do not use this product near water; for exampl wet basement, or near a swimming pool.
5. Do not place this product on an unstable cart, to the product.
6. Slots and openings in the cabinet and the back overheating, these openings must not be block placing the product on the bed, sofa, rug, or o or over a radiator or heat register. This produc proper ventilation is provided.
7. Do not allow anything to rest on the power co animals or persons walking on it.
8. Do not overload wall outlets and extension co
9. Never push objects of any kind into this produ points or short out parts that could result in a product.
10. To reduce the risk of electric shock, do not dis when service or repair work is required. Openi or other risks. Incorrect re-assembly can caus
11. Unplug this product from the wall outlet and re conditions:
    A. When the power supply cord or plug is dam
    B. If liquid has been spilled into the product.
    C. If the product has been exposed to rain or
    D. If the product does not operate normally by controls, that are covered by the operating may result in damage and will often require to normal operation.
    E. If the product has been dropped or the cab
    F. If the product exhibits a distinct change in
12. Avoid using a telephone (other than a cordless electric shock from lightning.
13. Do not use the telephone to report a gas leak

SAVE THES

n the
keypad.

Enter six to play message file.

2 ***3*** on the keypad to erase messages or, as a specific message plays, press ***3*** to individually erase that message.

CLEANING THE TA-119

CAUTION: Disconnect the TA-119 from the power outlet before cleaning.

or refrigerator f
should be prote
and defrosting.
temperature pri

IMPORTANT SAFETY INSTRUCTIONS

ATION INSTRUCTIONS

telephone wiring during a lightning storm.
telephone jacks in wet locations unless the jack is specifically designed for wet locations.
uninsulated telephone wires or terminals unless the telephone line has been disconnected at the
rface.
when installing or modifying telephone lines.

PRECAUTIONS

ur telephone equipment, basic safety precautions should always be followed to reduce the risk of
ck and injury to persons, including the following:
derstand all instructions.
arnings and instructions marked on the product.
product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a
for cleaning.
his product near water; for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a
nt, or near a swimming pool.
this product on an unstable cart, stand, or table. The product may fall, causing serious damage
ct.
enings in the cabinet and the back or bottom are provided for ventilation, to protect it from
these openings must not be blocked or covered. The openings should never be blocked by
roduct on the bed, sofa, rug, or other similar surface. This product should never be placed near
diator or heat register. This product should not be placed in an enclosed environment unless
lation is provided.
anything to rest on the power cord. Do not locate this product where the cord will be abused by
ersons walking on it.
oad wall outlets and extension cords as this can result in the risk of fire or electric shock.
objects of any kind into this product through cabinet slots as they may touch dangerous voltage
ort out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the

e risk of electric shock, do not disassemble this product, but take it to a qualified serviceperson
e or repair work is required. Opening or removing covers may expose you to dangerous voltages
s. Incorrect re-assembly can cause electric shock when the appliance is subsequently used.
product from the wall outlet and refer servicing to qualified service personnel under the following

e power supply cord or plug is damaged or frayed.
as been spilled into the product.
oduct has been exposed to rain or water.
oduct does not operate normally by following the operating instructions. Adjust only those
that are covered by the operating instructions because improper adjustment of other controls
lt in damage and will often require extensive work by a qualified technician to restore the product
l operation.
oduct has been dropped or the cabinet has been damaged.
oduct exhibits a distinct change in performance.
a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of
k from lightning.
he telephone to report a gas leak while near the leak.

SAVE THESE INSTRUCTIONS

REFERENCIA RÀ

INSTALACIÓN

1 ***ENCHUFE*** el cordón de teléfono de su TA-119 en un enchufe de pared de teléfono.

2 ***CONECTE*** el enchufe de adaptador de CA en el enchufe para adaptador de CA que hay en la parte de atrás de su TA-119. ***ENGANCHE*** el cordón a través del sujetador de cordón del adaptador de CA para evitar una desconexión accidental.

NOTA:
- La desconexión del adaptador de CA de la parte de atrás de la unidad hará que su TA-119 borre todos los mensajes recibidos y saludos grabados.

3 ***CONECTE*** el cordón del teléfono al enchufe de su TA-119 etiquetado "TO TELEPHONE" (al teléfono).

4 ***ENCHUFE*** el adaptador de CA en un tomacorriente de pared eléctrico. Después de ocho segundos se oirá una señal acústica and "**PF**" will appear in the display. Su TA-119 está listo para grabar un saludo.

5 Instale una batería de 9 voltios (9V) para proteger los mensajes recibidos, el saludo y la configuración de la hora y el día.

GRABACIÓN DEL SALUDO

Grabe un saludo personalizado, de hasta dos minutos, para contestar sus llamadas. Asegúrese de que las luces indicadoras están encendidas o destellando.

1 Fije el control de volumen ***(VOLUME)*** en el punto medio.

NOTA:
- El nivel de sonido se ajusta automáticamente cuando el saludo se transmite por la línea de teléfono.

2 Oprima el botón de grabación de saludo ***(GREETING RECORD)*** y espere a que se encienda el indicador de grabación (RECORD INDICATOR).

Please record new greeting.

3 Comien
15 a 20

4 Despué
otra ve
(GREE

5 Su TA-1

FIJAC

1 Oprima
(TIME

2 Oprima
repetici
máquin

3 Oprima
(TIME

4 Oprima
aument
(REPE
display

5 Oprima
(TIME

6 Oprima
aument
repetici
shown

7 Oprima
de tiem
El día y
anuncia
del tien
comple

A-119

rom the

or refrigerator for the purpose of extending shelf life should be protected from condensation during storage and defrosting. Batteries should be stabilized at room temperature prior to use after cold storage.

Internet Web Site: http://www.casiophonemate.com

MISI 1/99

Printed in Malaysia

U.S. Patents: 5,289,529; 5,400,393; 5,588,046; 5,606,598; 5,680,075; 5,692,0

ERENCIA RÀPIDA

N

ono de su
d de

tador de
or de CA
su TA-
a través del
ador de CA
ccidental.

de la parte de
borre todos
bados.

ono al
do "TO

A en un
co. Después
señal
the
ara grabar

(9V) para
s, el saludo
el día.

ALUDO

hasta dos
as.
oras están

OLUME)

amente cuando
teléfono.

de saludo
spere a que
abación

Please record new greeting.

3 Comience a hablar a una distancia de 15 a 20 cm. del micrófono.

4 Después de terminar de hablar, oprima otra vez el botón de grabación de saludo ***(GREETING RECORD)***.

5 Su TA-119 reproducirá el saludo.

FIJACIÓN DE LA HORA Y EL DÍA

1 Oprima el botón de fijación de tiempo ***(TIME SET)***.

Sunday

2 Oprima el botón de salto ***(SKIP)*** o repetición ***(REPEAT)*** hasta que la máquina anuncie el día correcto.

3 Oprima el botón de fijación de tiempo ***(TIME SET)*** para fijar la hora.

Enter hour a.m.

4 Oprima el botón de salto ***(SKIP)*** para aumentar la hora o el botón de repetición ***(REPEAT)*** para disminuirla shown in the display.

5 Oprima el botón de fijación de tiempo ***(TIME SET)*** para fijar los minutos.

Enter minute.

6 Oprima el botón de salto ***(SKIP)*** para aumentar los minutos o el botón de repetición ***(REPEAT)*** para disminuirlos shown in the display.

7 Oprima nuevamente el botón de fijación de tiempo ***(TIME SET)*** para terminar. El día y la hora se anunciarán y la fijación del tiempo se habrá completado.

Saturday, 2:32 a.m.

WARRANTY

IMPORTANT! SALES SLIP OR EVIDENCE OF PURCHASE DATE REQUIRE

This limited warranty gives you specific legal rights; you may also have other rights which vary from sta
The limited warranty is extended only to the original consumer of a CASIO PHONEMATE product and is
respect to consumers within the United States of America and Canada. Should this product prove defec
of improper workmanship or material during the period of one (1) year from the date of original purchas
PHONEMATE will repair or, at its option, replace the product without charge for parts or labor. If CASIO
elects to replace the product, such replacement may be accomplished with a factory-reconditioned unit.
This limited warranty does not apply: (a) to any product damaged by accident, misuse, improper line vo
fire, water, or other acts of nature, (b) if the product is altered or repaired by anyone other than CASIO P
INC. or one of its authorized warranty stations or (c) if the FCC-approved connector plugs are removed.
warranty does not cover broken or marred cabinets.
Except to the extent prohibited by applicable law, all implied warranties made by CASIO PHONEMATE in
with this product are limited in duration to a period of one (1) year from the date of original purchase, a
warranties, whether expressed or implied, shall apply to this product after said period.
Should this product prove defective in workmanship or material, the consumer's sole remedies shall be
replacement as is herein-above provided. Under no circumstances shall CASIO PHONEMATE be liable fo
damage, direct, consequential, or incidental arising out of the use of or inability to use this product.
Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitatio
or consequential damages, so the above limitations or exclusion may not apply to you.
In order to obtain warranty service, you must provide evidence of purchase date. For your convenience,
dealer's dated bill of sale or delivery ticket as evidence of the purchase date.
Before returning or exchanging your product, call CASIO PHONEMATE 's Helpline at (310) 320-9810.

ACCESSORIES

To order accessories, simply cut out this order form, fill in the appropriate information and
payment (check, money order or credit card information) to: CASIO PHONEMATE Parts Dep
8805 Kelso Drive, Baltimore, MD 21221 or Call: 1-800-322-9995 for credit card orders.

Description	Part No.	Price	Q
Lightning Arrestor - Recommended for areas prone to electrical storms.	2700140	$19.95	
A + A1 Light Control	2701180	$6.95	
AC Adapter - For Model TA-119.	1601086	$13.50	
Touchtone Dialer - Activates the beeperless remote operation.	2001018	$19.95	

☐ Enclosed is my check/money order for the total amount. **Subt**

Please charge my credit card. CA & MD residents add applicable sales

☐ **VISA** ☐ **MasterCard** All orders add shipping and hand

Card No. Expiration Date **T**

Name _____

Street Address _____

City _____ State _____ Zip Code _____

Signature _____ Telephone _____

We do not accept C.O.D. orders. Allow 15 working days for delivery. Prices subject to change without n
subject to 20% restocking charge upon approval.

asiophonemate.com

ysia
; 5,606,598; 5,680,075; 5,692,042.

NTY

F PURCHASE DATE REQUIRED

ave other rights which vary from state to state.
CASIO PHONEMATE product and is valid only with
da. Should this product prove defective by reason
ear from the date of original purchase, CASIO
t charge for parts or labor. If CASIO PHONEMATE
ed with a factory-reconditioned unit.
y accident, misuse, improper line voltage, lightning,
aired by anyone other than CASIO PHONEMATE,
roved connector plugs are removed. This limited

ties made by CASIO PHONEMATE in connection
from the date of original purchase, and no
t after said period.
e consumer's sole remedies shall be such repair or
shall CASIO PHONEMATE be liable for any loss or
f or inability to use this product.
nty lasts or the exclusion or limitation of incidental
ay not apply to you.
urchase date. For your convenience, keep the
se date.
TE 's Helpline at (310) 320-9810.

RIES

the appropriate information and send it with
o: CASIO PHONEMATE Parts Department,
-9995 for credit card orders.

	Part No.	Price	Qty.	Total
storms.	2700140	$19.95		
	2701180	$6.95		
	1601086	$13.50		
	2001018	$19.95		
			Subtotal	
			MD residents add applicable sales tax	
			All orders add shipping and handling	$3.50
			Total	

_____

_____

tate _____ Zip Code _____

____ Telephone _____

y. Prices subject to change without notice. Returns

INSTALLATION

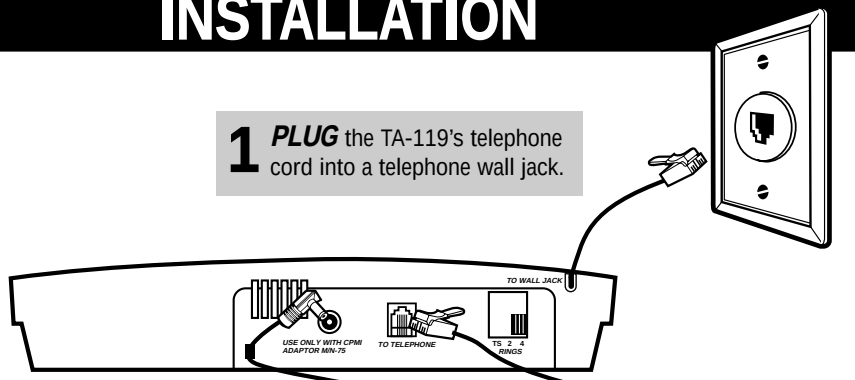

1 ***PLUG*** the TA-119's telephone cord into a telephone wall jack.

2 ***CONNECT*** the AC Adapter Plug into the AC Adapter Outlet on the back of the TA-119. ***LOOP*** the cord through the AC Adapter Cord Holder to prevent accidental disconnection.

NOTE:
- Disconnection of the AC Adapter from the back of the unit will cause the TA-119 to erase all recorded messages and greetings.

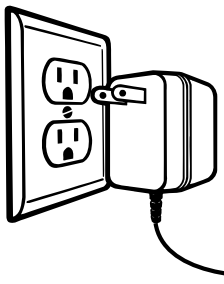

3 ***CONNECT*** the cord from your telephone to the TA-119's outlet labeled "TO TELEPHONE."

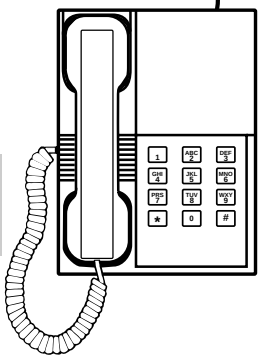

4 ***PLUG*** the AC Adapter into an electrical wall outlet. After eight seconds a beep will be heard and "**PF**" will appear in the display. The TA-119 is now ready to record a greeting.

5 Install a 9 volt (9V) battery to protect your greeting, incoming messages and time/day setting. (See "INSTALLING A 9V BATTERY.")

LED DISPLAYS

AO	Announce Only	Lb	Low Battery	rc	Record
Er	Erase Messages	3	Message Count	SA	Save Messages
F,	Forward to Message File or Greeting File	P	Pause Playback	SP	Speaker-phone
Hd	Hold	PF	Power Failure		

Open for easy operating guide!